

EDIFIER 漫步者

H880

头戴式立体声耳机
High Fidelity Stereo Headphone

产品特点：

1. 40mm高分子金属复合振膜，轻质坚韧，拥有大动态与高解析；
 2. 腔体空间调节技术，合理改善声波反射，有效抑制谐振、充实低频；
 3. 钢结构头带，CNC精加工铝金属滑动支臂，金属音频插头，美观精致、可靠耐用；
 4. 精选蛋白皮与高弹海绵的定制耳套与头垫，更亲肤，更舒适；
 5. 倾斜式人体工学耳套，合理包裹耳周轮廓，密封性、舒适性俱佳；
 6. 标配2.5米高品质音频线、1.2米手机线控音频线、精品收纳袋。
-

规格参数：

频响范围：20Hz-20kHz

声压级：100dB


标称阻抗：24Ω

驱动单元：40mm

单元类型：封闭式动圈

频响曲线：

H880 B&K人工头测试频响曲线

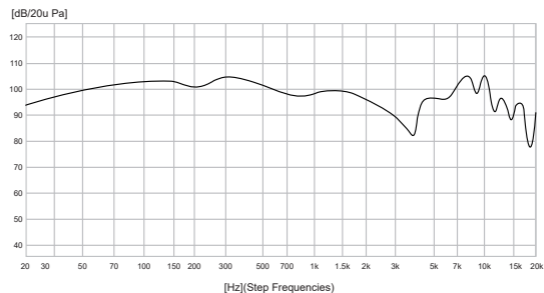

以上参数仅供参考，设计和规格如有变更，恕不另行通知。

使用方法：

1.根据使用情况,选择合适的耳机线将3.5mm接口接入耳机,另一端接入播放设备。





(注意:请将音频线有‘EDIFIER’ LOGO的一端接入播放设备;另一端接入耳机。)

2.请调节至合适的头带长度、并根据左右声道标示正确佩戴；



3. 线控器操作方式：

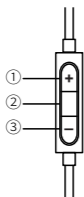

- ① 音量加
- ② 单击:暂停/播放/接听/挂断
双击:下一曲
三连击:上一曲
- ③ 音量减
- ④ 麦克风

4. 可折叠耳机支臂, 放入收纳袋, 便于携带。




包装清单:

头戴式立体声耳机*1 PCS



收纳袋*1 PCS

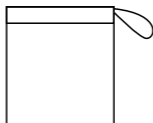

3.5mm 音频线(带线控)*1 PCS



3.5mm 音频线(不带线控)*1 PCS



6.35mm 转换头*1 PCS



魔术贴*2 PCS



说明书*保修卡1 PCS



Features

- 40mm unit with high polymer metal composite diaphragm, light and durable.
 - Cavity space adjustment technology for reasonable improve sound wave reflection.
 - Steel structure headband matches movable alloy bracket made by CNC device.
 - Earmuff and headband cushion covered with protein leather and high elastic sponge.
 - Tilting ergonomic earmuffs for comfortable wearing.
 - Including high quality audio cable, phones wired controller audio cable and high-end pouch.
-

Specifications:

Frequency response: 20Hz-20kHz

Sound pressure level: 100dB


Impedance: 24Ω

Driver unit: 40mm

Type: closed moving coil

Frequency response curve:

H880 B&K manual head test frequency response curve.

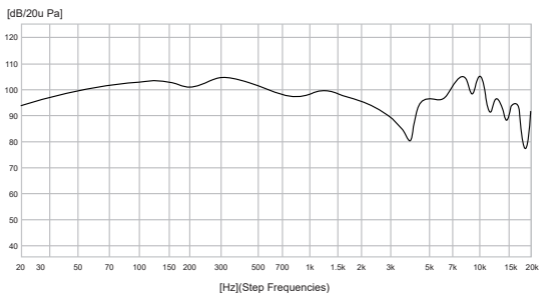

The above specification is only for your reference, design and specification are subject to change without notice.

Usage:

1. According to the actual condition, select an applicable audio cable to connect the headphone and player device.





Note:

Connect the audio cable that with EDIFIER logo port to player device and another port to headphone.

2. As the follow illustration shows, adjust the headphone to an applicable length and based on left and right channel marks for correct wearing.



3. Operational ways of wired controller

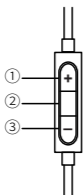

- ① Volume increase
- ② Press: pause or play music/answer or end a call
Double press: next track
Press thrice: previous track
- ③ Volume decrease
- ④ microphone

4. Fold the bracket of the headphone and put it into storage bag for portable carrying.




Box content:


Headphone*1pcs



Storage bag*1pcs

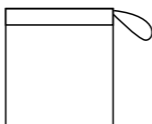

3.5mm audio cable (with wired controller)*1pcs



3.5mm audio cable (without wired controller)*1pcs



6.35mm adapter connector*1pcs



Magic tape*2pcs



User manual*1pcs
warranty card*1pcs



安全注意事项：

Warning!

为保证您的人身安全，请勿将该耳机佩戴或放置在离心脏起搏器过近的位置(小于10CM)。

To guarantee your personal safety, please do not wear or keep headphones in the vicinity (closer than 10cm) of a pacemaker.

请勿将插头插入电源插座。

Do not insert plug into electric sockets.

儿童应在成人监督下使用本设备，本产品并非玩具。

Supervise children when using the equipment, the product is not a toy.

在高音量下使用耳机——特别是长时间使用——可能会对您的听力造成损伤。

Headphone listening at high volume levels – particularly, over extended periods of time – may damage your hearing.

操作高保真音响开关或插入耳机时可能会发出尖利的声音，其在高音量设置下可能会影响您的听力。因此，在切换各种音源或插入耳机前，请将音量控制设置为最低。

The operation of switches on your hi-fi system or plugging in the headphones may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the headphones.

为交通安全起见，驾驶时或骑自行车时请勿使用耳机。

For traffic safety, do not use headphones while driving or cycling.

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属部件	×	○	○	○	○	○
塑料部件	○	○	○	○	○	○
电线电缆	○	○	○	○	○	○
电路板组件	○	○	○	○	○	○
电镀件	○	○	○	○	○	○

本表依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中含量均在GB/T 26572规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

在某些产品中可能包含电池，该电池并非漫步者产品，该电池的关于有害物质含量的标识应由电池生产商提供。

注：环保使用期限取决于产品正常工作的温度和湿度等条件。





微信扫一扫, 更多信息

北京爱德发科技有限公司 出品

地 址: 北京市海淀区北四环西路68号

生产商: 东莞市漫步者科技有限公司

厂 址: 东莞松山湖高新技术产业开发区工业东路2号

商标说明: EDIFIER® , 漫步者® 均为北京爱德发科技有限公司持有注册商标, 仿冒必究。